

Portable Tetherball

PARK & SUN SPORTS®

Instructions

ADULT ASSEMBLY AND SUPERVISION REQUIRED

Inspect equipment before each use making sure all hardware, pole sections and ball are secure.

Park & Sun Sports assumes no liability for misuse of product.

The Portable Tetherball Set has been designed for easy installation and storage and can be used on firm soil conditions. It is not recommended in rocky, sandy or soft soil conditions as this will affect the stability of the set. Certain soil conditions may require the set to be repositioned for stability.

Ground mounted tetherball poles may have more top pole sway, but will not affect the product or game performance.



Set Includes:

Galvanized Steel Pole

18 gauge steel - Heavy duty construction
Weather resistant
Assembles to standard playing height

Synthetic Ball

Soft Touch synthetic cover, machine-stitched
10mm nylon tether and safety lock connector

Hardware

Zinc-plated eyebolt and ball connector
Offers easy ball attachment and removal

ACCESSORIES

Ball pump

WARNING: Inspect equipment before each use. Make sure all hardware, poles and ball are secure.

To insure proper set-up, please follow these instructions.

Make sure that the tri-pod base is positioned on a flat surface.

The 3 ground stakes must be placed in each of the tri-pod leg holes.

Insert the ground stakes at a 30-45 degree angle with the points driven toward the center pole spike.

If stakes become loose, move or rotate the tri-pod leg positions until the system is secure and stabilized.

Note: Your set will have some slight swaying which is common on portable systems. If you are experiencing excessive swaying this may indicate that the tri-pod base needs to be re-anchored or repositioned.

Pole Instructions

1. Connect the pole sections.
2. Attach ball connector to pole eyebolt.
Make sure safety lock is secure.
3. Ball should hang 24" above the playing surface when installed.

