



Tournament 4000 Series Assembly Instructions



4000 **4000-T**
(1 Piece pole) (2 Piece pole)

2150 S Tejon Street • Englewood, CO 80110 • 800-776-7275 • 303-935-8449
info@parksun.com • www.parksun.com • www.facebook.com/PSSports

©2009-2012 All Rights Reserved Park & Sun Inc,



Inner | Outer
Pole

Tournament T-4000 Set includes:


- Telescopic aluminum poles with eyebolts (3-1/2" diameter top section / 4" diameter bottom)
- 39" x 32' steel cable volleyball net with side dowels
- Lever ratchet
- 4 - 6" Eye Bolt with wing nuts
- 2 - Carabineer net connectors
- BC-WEB-A sand/grass adjustable boundary (30'x60' and 8m x 16m court dimensions)
- Equipment storage bag for net and accessories

Tournament 4000 Set includes:

- 4"x12'6" aluminum poles with eyebolts
- 39"x32' steel cable volleyball net with side dowels
- Lever ratchet
- Carabineer net connectors
- BC-WEB-A sand/grass adjustable boundary (30'x60' court dimensions)
- Equipment storage bag for net and accessories

Options:

4' PVC ground sleeve with caps

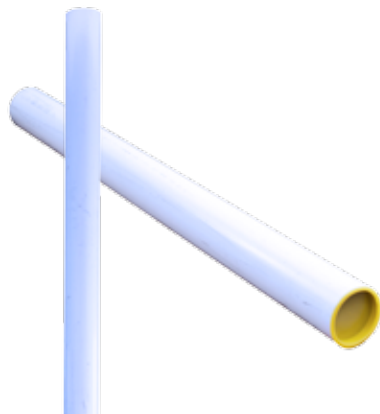

Safety Standards

*Gloves and protective eye wear are recommended.

*Adult assembly required

Pole Installation

- Poles must be positioned at 36' apart at center (diagram 1a).
- Surface hole diameter must be a minimum of 10" (diagram 1b) and 4' - 4'6" deep (diagram 1c). Top eyebolt pole setting must be 8'2" above surface. This will determine the hole depth that is needed.
- * **PVC Sleeve option (diagram 1c) – Close off sleeve bottom, with heavy duty tape or plastic bag to prevent concrete from entering the sleeve when filling the hole with concrete.**
- Center the pole or sleeve at 90 degrees prior to adding concrete. Refer to concrete curing specifications and support pole or sleeve during the set up process.

Pole Height Adjustment


7'6" and 8'2"

Net attachment

- Attach one end of the net cables to pole eye bolts using the S-hook or carabineers provided (diagram 2a).
- Attach the opposite top cable over and down through upper eye-bolt and connect with one lever ratchet carabineer to hold in place (diagram 2b). Attach lower cable, up and through lower eye bolt and connect with remaining lever ratchet carabineer.
- Tighten lever ratchet to tension net.
Note: if cables are too long make adjustments on fixed cable connection end.
-Short, add cable or chain
-Long, pull cable loops through upper and lower eye-bolts and connect together (diagram 2c)
- Net removal or adjustment. Carefully release lever ratchet lock and slowly loosen.

The lever ratchet will tighten both the upper and lower cables evenly. Do not over tighten the cables as it may damage your equipment.

Attach side cords to the net sides and pole to adjust the net tension evenly over the poles.

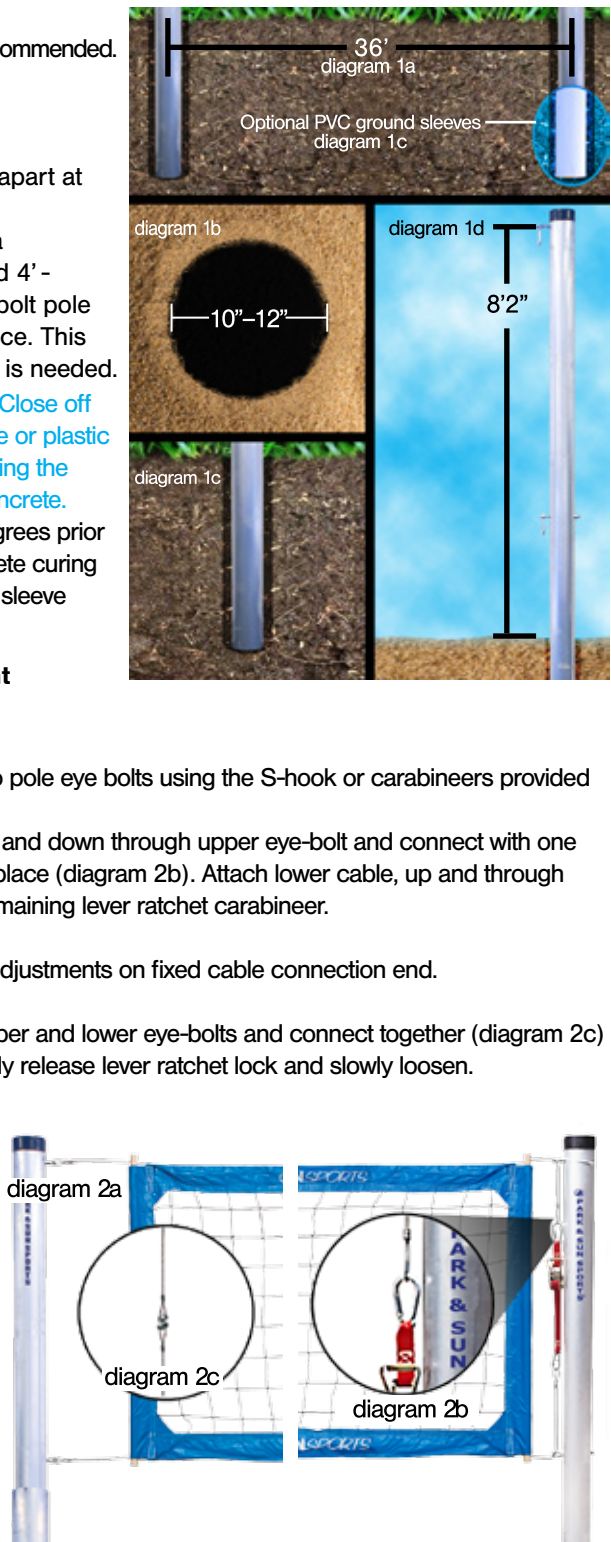

Dedication - Innovation - Commitment to Quality
These are the hallmarks of Park & Sun Sports



We have designed and supplied high-quality outdoor recreational/professional grade sporting goods equipment for over 20 years.

We sell national and internationally from our corporate headquarters in Englewood, Colorado.

We are better-best manufacturer servicing the retail, institutional, e-commerce, and premium sales.

We offer in-house R&D, design, production capabilities, and drop ship facilities.

We have the ability to operate as a direct overseas importer in the southeast Asian market.

We are fully prepared to handle your needs in today's global market.

#ParkandSunVolleyball

2150 S Tejon Street • Englewood, CO 80110 • 800-776-7275 • 303-935-8449
info@parksun.com • www.parksun.com • www.facebook.com/PSSports

©2009-2012 All Rights Reserved Park & Sun Inc,